

WHEN TO CHANGE YOUR CLEVERSPA® FILTER

Keep your CleverSpa® hot tub clean and safe from contaminants. For optimum performance, unscrew the filter and rinse with clean water after every use to remove any small particles and residue.

The filter is one of the most important elements to ensure your CleverSpa® hot tub works effectively.

REPLACE YOUR OLD FILTER WITH A NEW ONE IF:

- The filter remains soiled after cleaning
- Holes are visible in the paper
- The paper is noticeably worn

IMPORTANT!

If your hot tub is making an unusual noise, your filter needs removing and cleaning or changing.

The frequency of use and condition of your filter will determine how often your filter needs changing.



TIPS FOR CLEANING YOUR CLEVERSPA® FILTER



CLEVERSPA® FILTER AFTER USE

Please note - the more frequently you use your hot tub the quicker your filters will become dirty.



CLEANED IN A DISHWASHER

Place on a quick cycle using a dishwasher tablet. We highly recommend cleaning your filters in an empty dishwasher.



CLEANED IN A WASHING MACHINE

Place on a quick cycle using normal detergent. We recommend placing your filters inside a pillow case or in a towel to reduce noise.

To continue to enjoy your CleverSpa® hot tub, try alternating between 2-3 filters. Filters will eventually need changing, however this should extend the life of your filters.